

Preparing CP22XX and CP42XX Projectors for Initial Use

The reservoir plug is used during transit to prevent coolant leaks. It must be removed during the installation of the projector.

Affected products


The following products are affected:

- Christie CP2215 (P/N: 127-010113-02)
- Christie CP2220 (P/N: 127-002114-04)
- Christie CP2230 (P/N: 127-009100-02)
- Christie CP4220 (P/N: 129-006107-02)
- Christie CP4230 (P/N: 129-007108-02)

Removing the reservoir plug

Prior to using the projector, remove the plug from the reservoir assembly.

1. Follow the instructions in the projector's documentation to access the coolant reservoir.
 - *CP2215 Service Manual* (P/N: 020-101226-XX)
 - *CP2220 User Manual* (P/N: 020-100420-XX) or *CP2220 Service Manual* (P/N: 020-100472-XX)
 - *CP2230 Setup Guide* (P/N: 020-100515-XX) or *CP2230 Service Manual* (P/N: 020-100562-XX)
 - *CP4220 Service Manual* (P/N: 020-100691-XX)
 - *CP4230 User Manual* (P/N: 020-100621-XX) or *CP4230 Service Manual* (P/N: 020-100622-XX)
2. Remove the plug from the reservoir's cap.

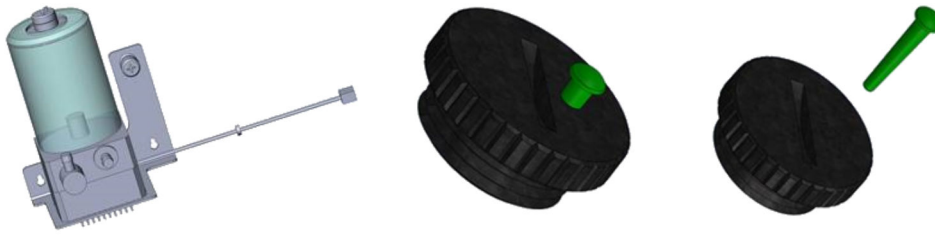

3. Tape the plug to the top of the cap so that it is available for reinsertion if the projector is to be transported in the future.

Alternatively, order a new plug in the Reservoir Cap service kit (P/N: 003-200638-XX).

4. Close the projector case.

Technical support

Technical support for Christie Cinema products is available at:

- Support.cinema@christiedigital.com
- +1-877-334-4267
- Christie Professional Services: +1-800-550-3061 or NOC@christiedigital.com